




Canon ImageCLASS MF4350d Speaker Replacement

Speaker on the right side of the printer (front facing).

Written By: Helena Yanez

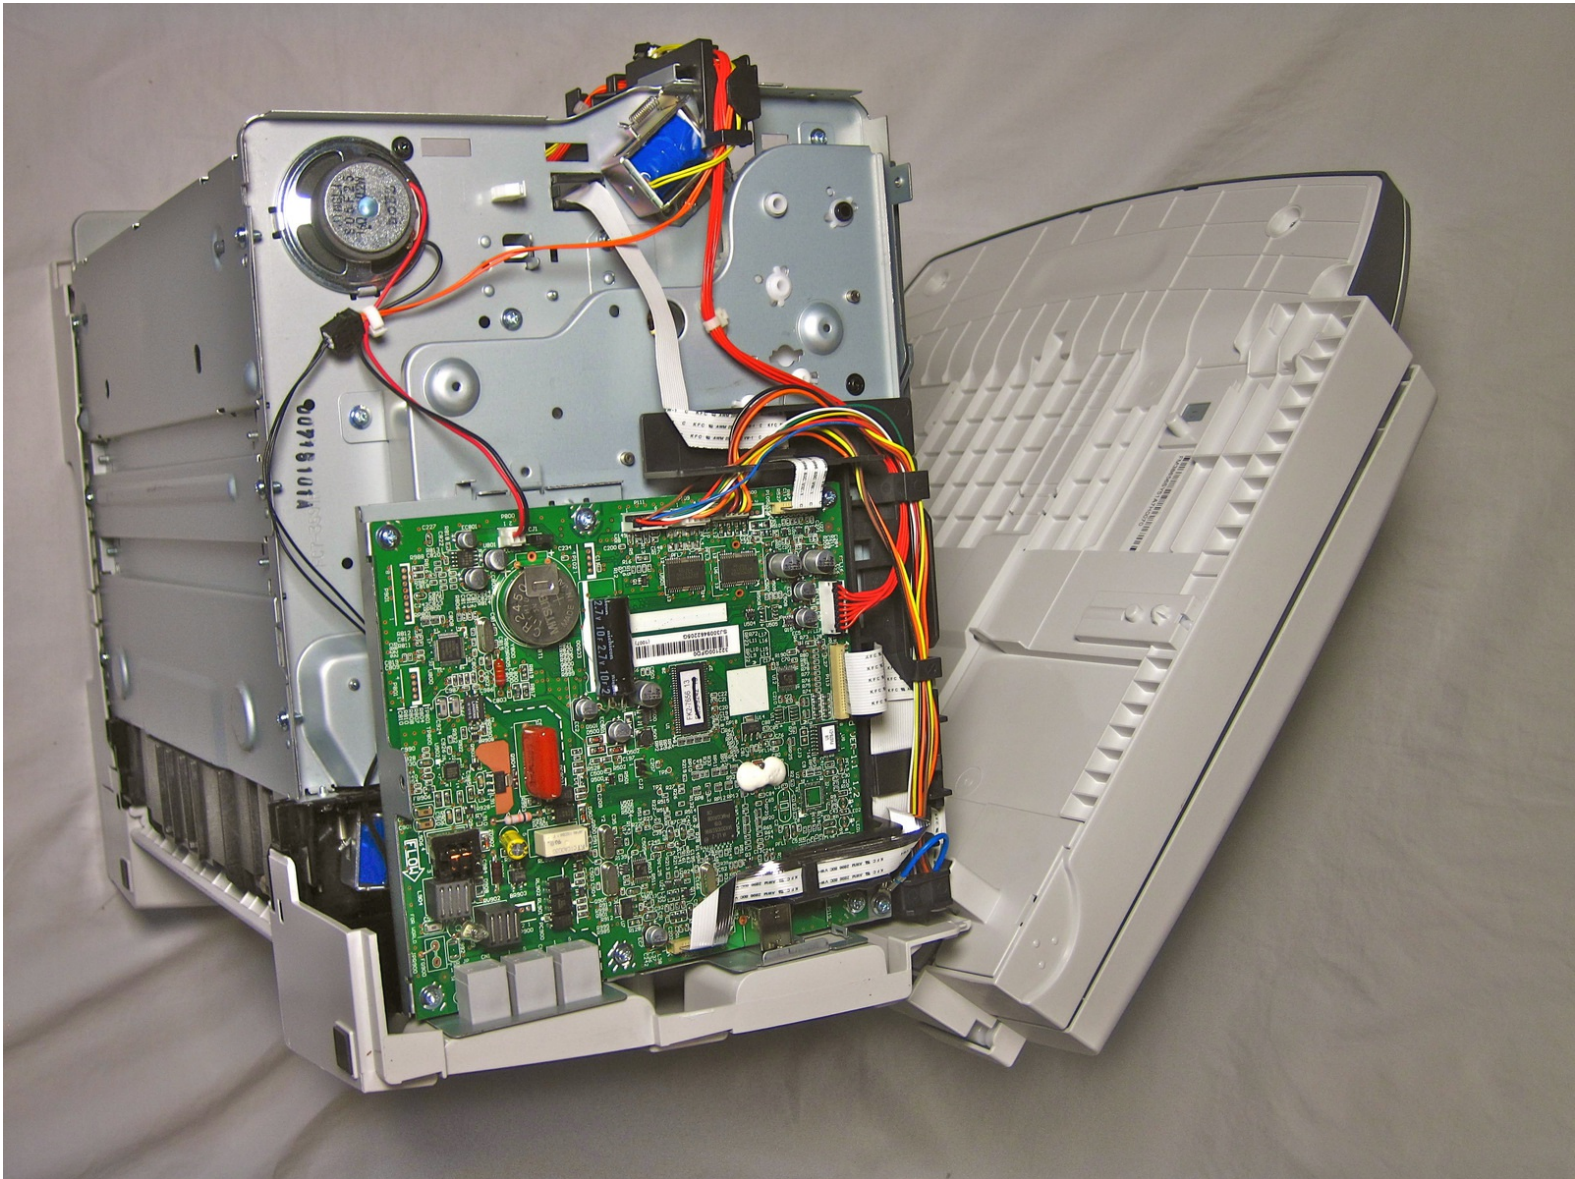

INTRODUCTION

This guide will teach you how to replace a faulty speaker.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)



PARTS:


- [Speaker](#) (1)

Step 1 — Front Paneling




- Lift the printer lid up as shown in the photo.

Step 2

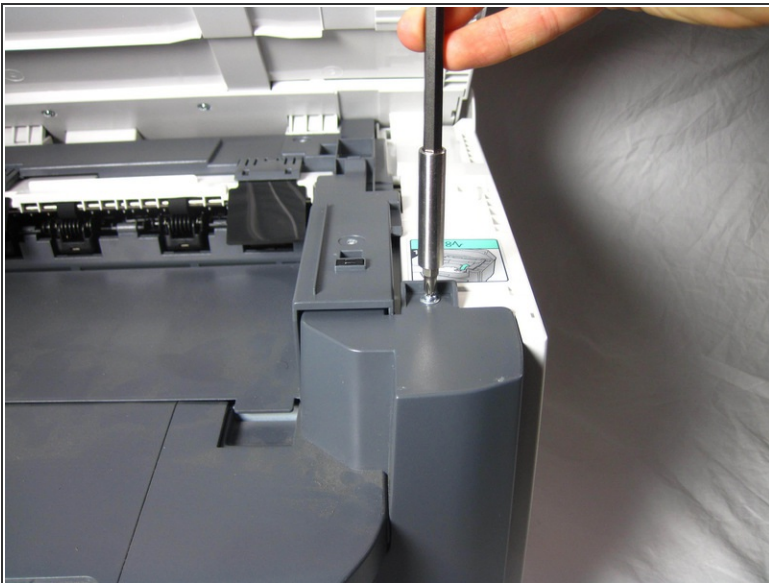




- Locate and remove the two 10mm side screws. There is one on each side.

Step 3

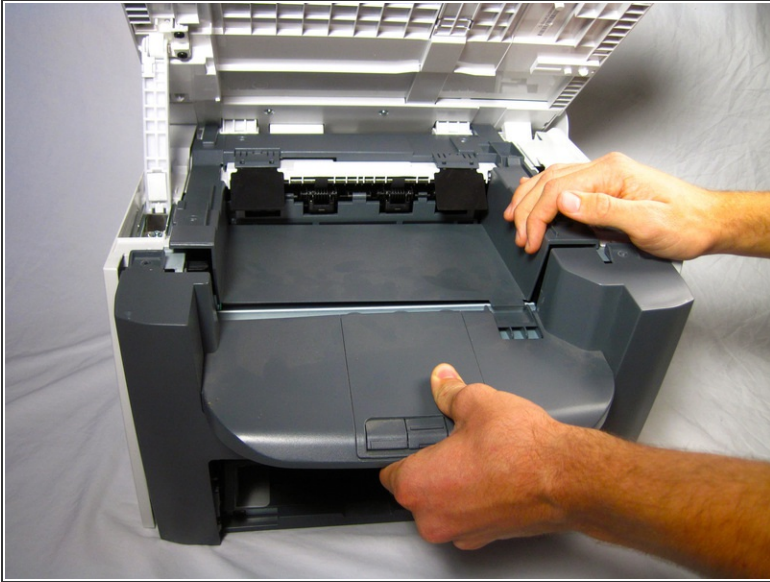


- Unhook the plastic panel from the printer starting from the top.
 - ⓘ You may need to wiggle the panel a bit to loosen it.
- To remove the bottom part of the paneling gently lay the printer on its back.
 - ⓘ The scanner lid needs to be supported when moving the printer

Step 4 — Right Side Paneling

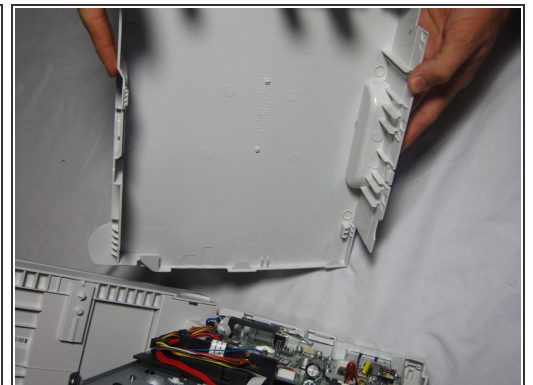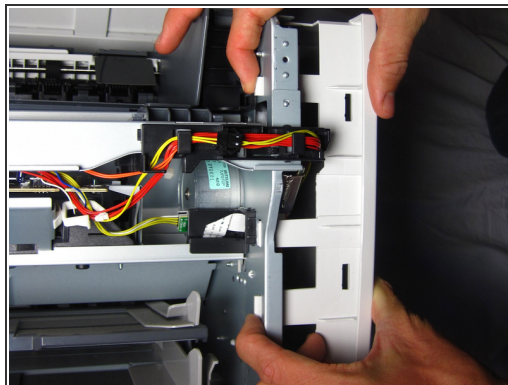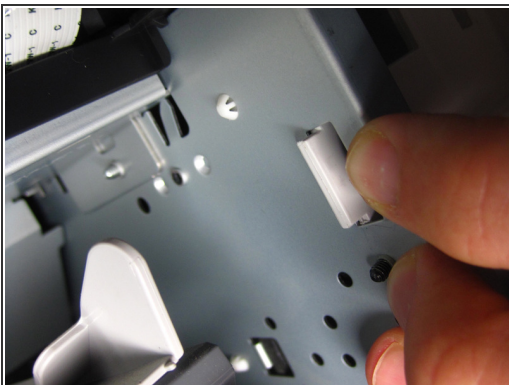



- Gently unhook the right side paneling (as looking at the printer's front face) from the printer.
 - ⓘ Use a gentle back and forth motion to wiggle the hooks out.

Step 5 — Speaker

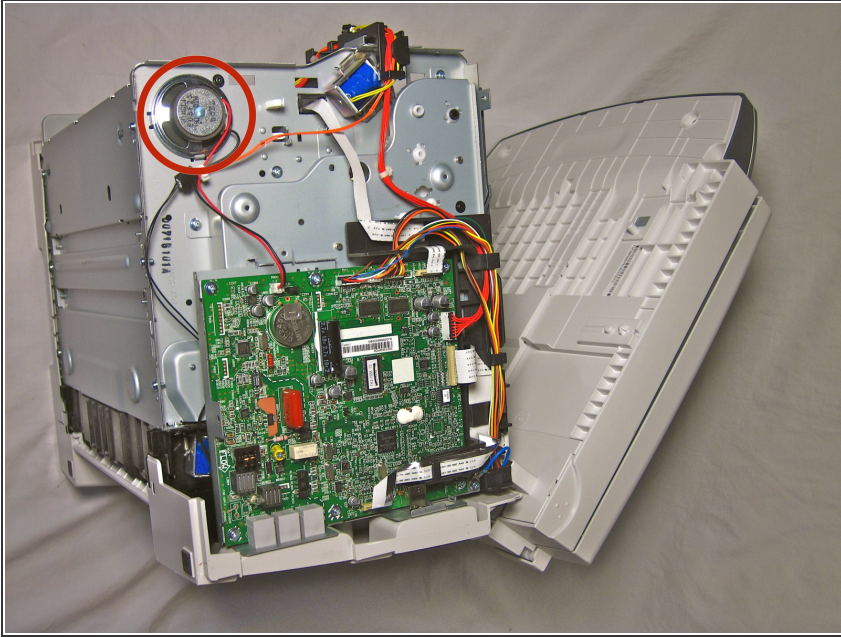


- Lay printer on its left side for better access to the speaker.
- ⓘ Note: The scanner lid needs to be supported when moving the printer

Step 6

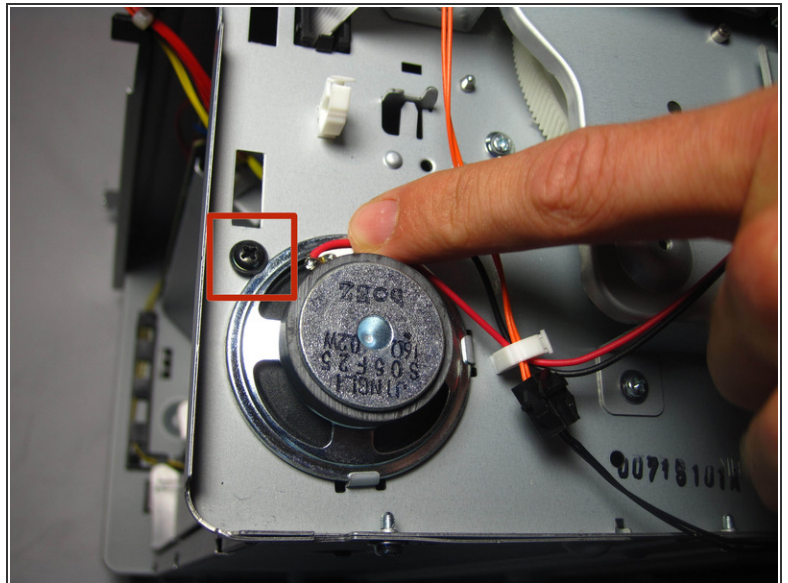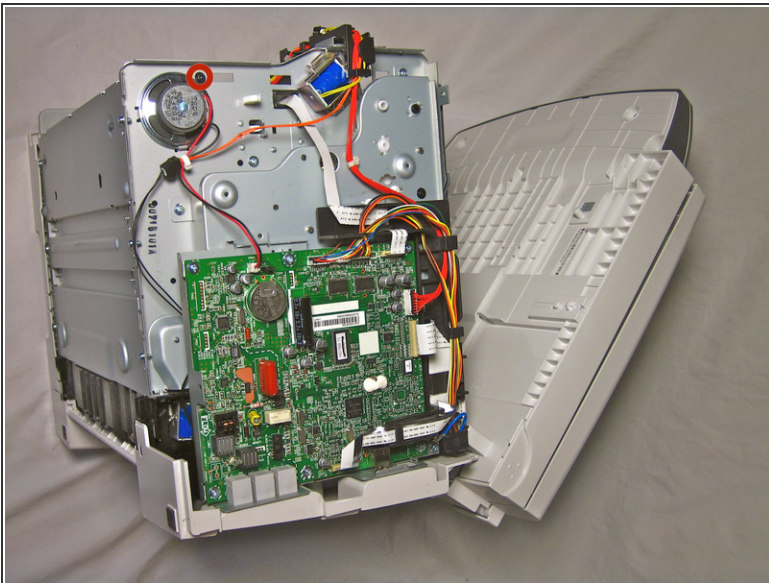


- Locate the black 7mm screw holding the speaker in place.
- Using a Phillips head screw driver, unscrew the 7mm screw.

Step 7

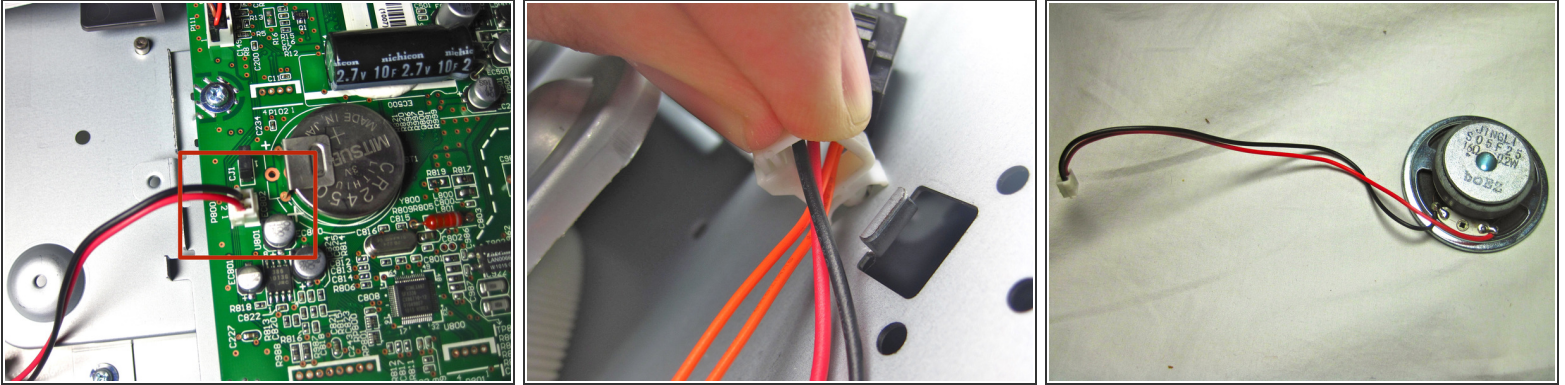

- Locate the red and black wires connected to the speaker.
- Undo the white clip holding the wires in place by pinching the tab on the top.
- Remove the red and black wires from the wire bundle.

 When replacing the old speaker, do not touch any part of the new speaker that is not metal other than the wires. Doing so could damage the speaker.

- Lift out the speaker

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-30 11:58:24 AM.